

# MLPE Bracket

# EcoFoot™


## Install Guide Addendum

EcoFoot MLPE Bracket enables optimizers and microinverters to be easily installed before modules are placed.

Simply attach MLPE Bracket to EcoFoot2+ or EcoFoot5D Base.


With fast and simple installation, EcoFoot MLPE Bracket compliments the speed, durability and simplicity of EcoFoot Ballasted Racking Solutions.

For full EcoFoot Racking2+ or EcoFoot5D Installation Instructions, see the Installation Guides.

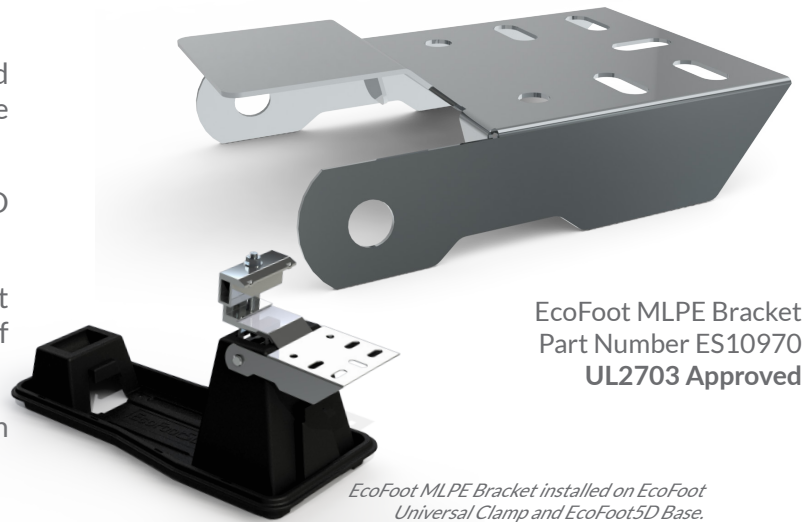

EcoFoot MLPE Bracket  
Part Number ES10970  
UL2703 Approved

## Simple to Install

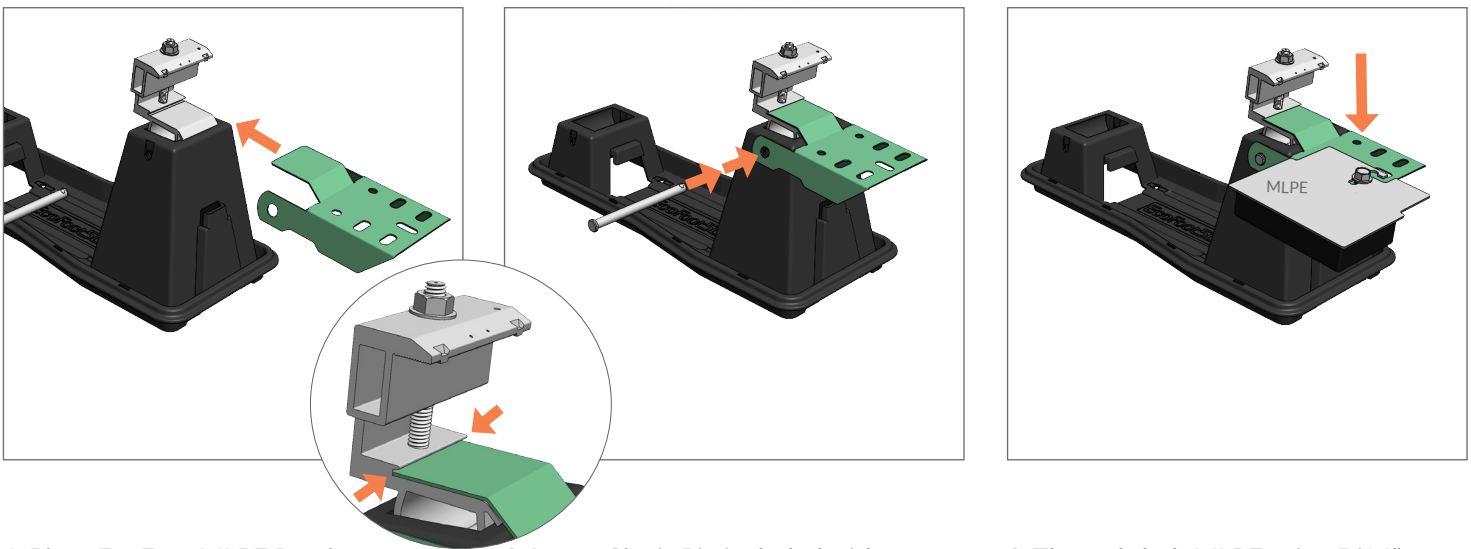

1. Place EcoFoot MLPE Bracket on EcoFoot Universal Clamp as shown. MLPE Bracket should nest into Clamp's groove, as shown in detail.

2. Insert Clevis Pin included with Universal Clamp Kit through MLPE Bracket, Base, and Clamp.

3. Through-bolt MLPE using 5/16" serrated flange nut and bolt included with EcoFoot MLPE Bracket. Torque to 14 ft lb.

## Simple to Order

Simply order EcoFoot MLPE Bracket with your EcoFoot racking. Part no. ES10970  
For help with orders or delivery information call 740.249.1877.

☎ Installation Support: Call Field Support at 866.488.6794  
Sales Support: Call Sales at 740.249.1877

📖 See full [EcoFoot2+ or EcoFoot5D Installation Guide](#).

🔗 [Visit website.](#)